
ACCESSORIES



ACOUSTIC UNDERLAY



STAIR NOSE



SKIRTING BOARD



CLEANER


Treat your floor to
perfection.

EN – Accessories

ACOUSTIC UNDERLAY 4

STAIRNOSE 7

SKIRTING BOARDS 11

CLEANER 14

DE – Zubehör

FR – Accessoires

IT – Accessori

ES – Accesorios

PT – Acessórios

The sound insulation
for quiet well-being



Protects against
moisture and mould

Reduces room
and impact sound

Reducing
subfloor unevenness

Compatible with
underfloor heating

Acoustic underlay

Product overview

GoldPro ACOUSTIC 3.5 mm and PROVENT ACOUSTIC 3.0 mm with built-in vapour barrier are suitable for laminate, hybrid resilient and engineered wood flooring, and are also compatible with underfloor heating.

The underlay's patented Micropumping™ system supports air circulation and, together with the integrating overlapping moisture barrier, the underlay reduces the impact of stagnant moisture and mold from the subfloor. It also contributes to a more efficient concrete drying system. GoldPro ACOUSTIC 3.5 mm and PROVENT ACOUSTIC 3.0 mm can be laid on concrete floors with a high RF value of max 97% RF*.

The floor underlay provides room and sound insulation for whisper-quiet impact noise, reducing step noise by up to 22 dB.

NEW!

GoldPro ACOUSTIC 3.5 mm in black PE with a GOLD foil backing designed for thermal insulation as well as a water-resistant membrane. It also reduces any unevenness in the subfloor.






GOLDPRO ACOUSTIC 3.5 mm



PROVENT ACOUSTIC 3.0 mm

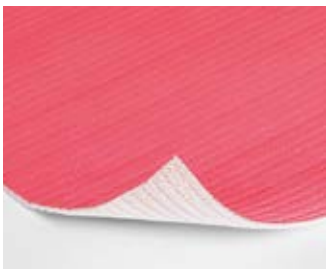

			GOLDPRO ACOUSTIC	PROVENT ACOUSTIC
Thickness	mm		3.5	3
Length	m / ft		15 / 49.21	20 / 65.62
Width	mm / ft		1000 / 3.28 film overlap 200mm	1000 / 3.28 film overlap 200mm
Roll	m^2 / sqft		15 / 161.46	20 / 215.28
Weight roll	kg / LBS		1.4 / 3.09 ± 5 %	1.6 / 3.53 ± 5 %
Impact sound improvement in	dB	EN ISO 10140-3	22	22
Reflected walking sound reduction	%	IHD-W431	22	22
Integrated moisture barrier			Yes	Yes
Thermal resistance	m^2K/W	EN 12667	0.07	0.07

* When room environments are according to industry rules at and after installation (ventilation, humidity, temperature, etc.) and ventilated between the skirting boards and the floor.

Step by step
Installation Guide



Clean your subfloor before starting – ensure that the subfloor is even, dry, clean and pressure-resistant.



ProVent should be rolled onto the floor with the vapour barrier upwards, parallel to the wall and at right angles to the direction in which you plan to lay the floor covering.



Begin the installation of the floor on the first row of underlay. Follow the manufacturer's instructions.



Unroll the next row of underlay. Overlap the rows. If installing over cement screed, the joints should be sealed with a waterproof tape such as duck tape.

Continue to install your flooring over the underlay. Repeat the previous steps until your floor is completed.

For a secure finish
Our stair noses

ELEGANCE AND SAFETY STEP BY STEP

The flush stair noses are made out of the planks. Therefore this solution has a decisive advantage: the floor and stairs have the same colour and texture as well as the same degree of gloss. But apart from the visually appealing overall appearance, our stair noses ensure one thing above all: increased safety when climbing stairs and reduced risk of tripping.



Larger footprint



More safety when climbing stairs



Pleasant step feeling



No visible screw connections

VARIANT TREADS WITHOUT RISER




VARIANT TREADS WITH RISER



Stair nose

Product overview

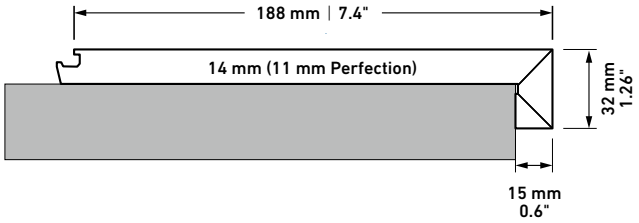


ORIGIN





BOX CONTENT: 2 pieces, 11.40 kg / 25.13 lb, Length: 2025 mm / 79.72"


SNOW
D4494 CM



ROCK
D4496 CM

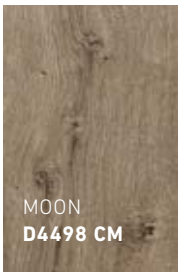

MOON
D4498 CM

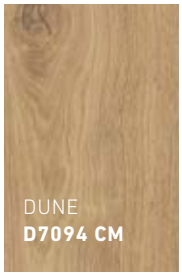
DUNE
D7094 CM

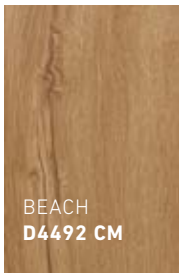

BEACH
D4492 CM

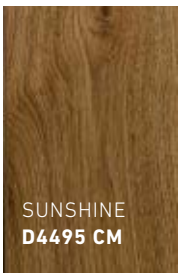
SUNSHINE
D4495 CM

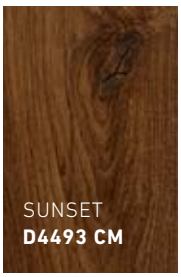

SUNSET
D4493 CM

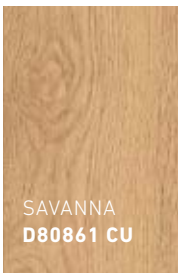

SAVANNA
D80861 CU



PRAIRIE
D80851 CU

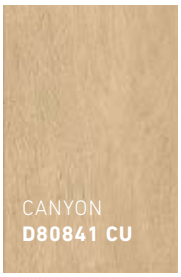
CANYON
D80841 CU

PERFECTION / ARTUREON GRANDE (WITH ALUMINIUM NOSE)

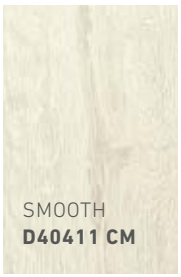

SMOOTH
D40411 CM

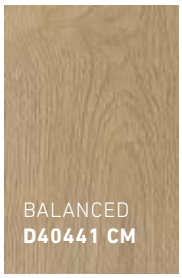

BALANCED
D40441 CM

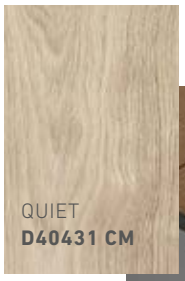

QUIET
D40431 CM

BOX CONTENT: 2 pieces, 10.40 kg / 22.92 lb, Length: 2025 mm / 79.72"

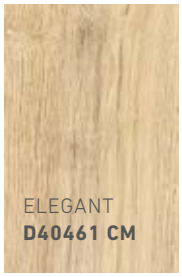




ELEGANT
D40461 CM

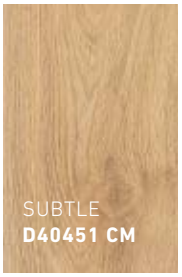

SUBTLE
D40451 CM

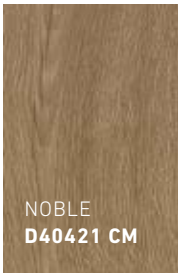
NOBLE
D40421 CM


AUTHENTIC

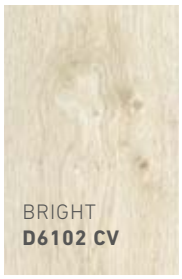


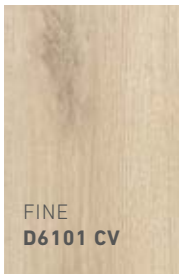


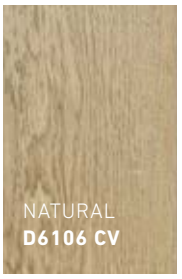




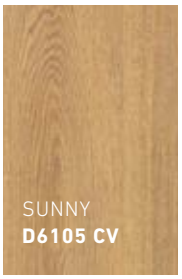

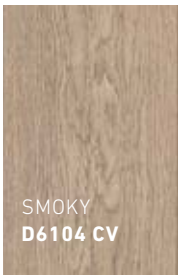

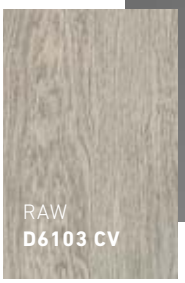



BOX CONTENT: 2 pieces, 10.60 kg / 23.37 lb, Length: 1845 mm / 72.6"

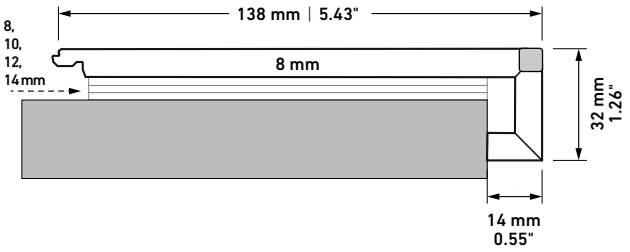



UNIVERSAL / artureon NORMA (WITH ALUMINIUM NOSE)



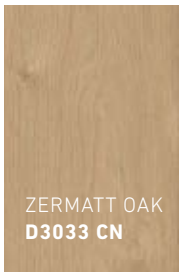

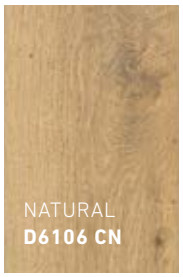

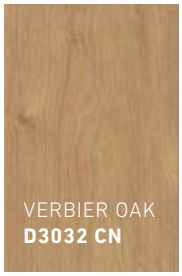

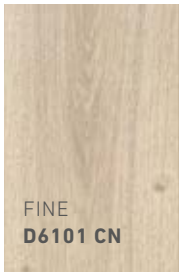








BOX CONTENT:
4 pieces, 8.8 kg / 19.40 lb
Length: 1380 mm / 54.33"



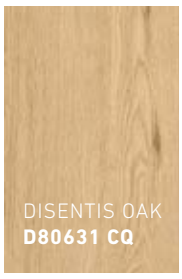


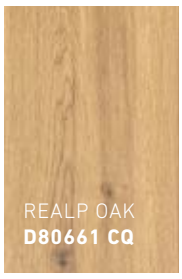

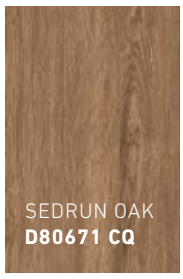




Step by step
Installation Guide

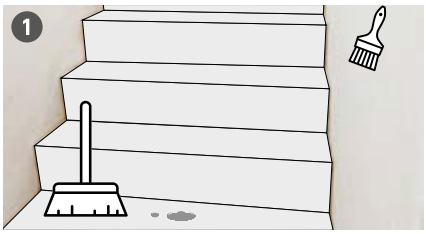


Remove dust and grease.
Repair and paint the wall and stairs.
Check the moisture of the subfloor.

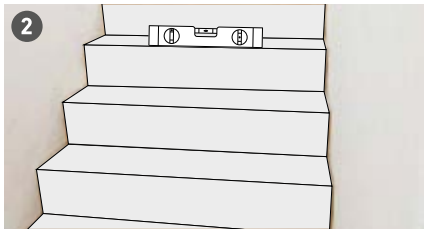


Check flatness (max. 2.5 mm over 1 m – repair imperfections). Unevenness above the permissible flatness tolerances must be levelled out by means of filler.


Cordon the stairs off during the work and until the adhesive has dried.

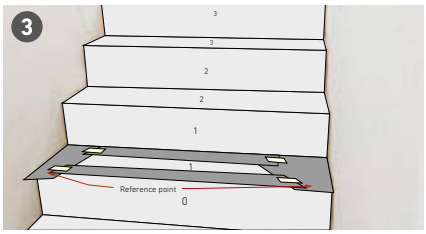


Number each tread and riser.
Make a cardboard template of each tread and write the number on the template.
Place the template on a new tread and align the two reference points with the nose.
The stair nose and the floor panel can simply be clicked together to form a stair step.

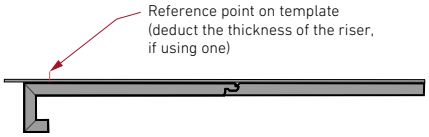


Draw the lines and saw the tread with a clean cut. This can be done, for example, with a circular saw, a jigsaw or a table saw. Don´t forget to number it!
Check whether everything fits perfectly. Correct where needed.

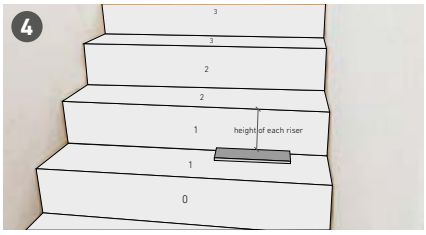

Measure the length of each riser and deduct 1 – 2 mm from the total length.
Measure the height of each riser – deduct the thickness of one tread from the total height of each riser (except for riser 0).
Draw the lines and saw the riser with a clean cut.
Don't forget to number it! Check whether everything fits perfectly.

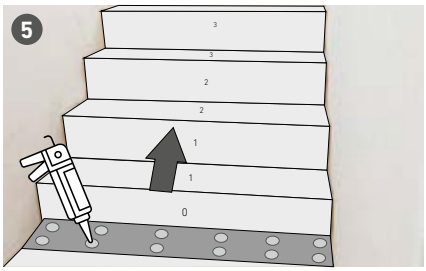

Use fast-drying adhesive for the risers.
Clean the surface of each tread so that it is free from dirt and dust.
If you have open steps, glue cover caps on the side.
Take care when walking on the freshly glued stair treads!

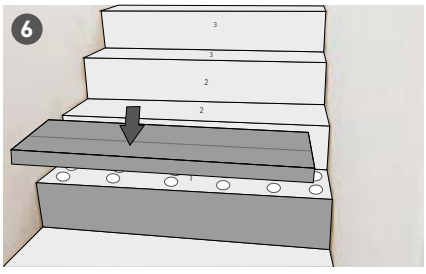

For the treads use a quality fast-drying adhesive that fills in the little uneven spots on the old tread.
Continue upwards with the next riser and the next tread, etc.
Seal the edges around the treads and the risers after the adhesive has dried.
Remove the cordon!

For a beautiful frame

Our skirting boards



GIVE YOUR FLOOR THE PERFECT FRAME

Stylish, meaningful and highly individual: Skirting boards are the ideal complement to an installed floor. They complete the overall look of any floor and at the same time create a flawless transition between the installed floor and the wall.



Perfect transition from floor to wall



Integrated cable duct



Can be fixed with standard screws



Also available water-proof (in RAL 9016)

Skirting boards

Product overview

UNIVERSAL Dimension 14 × 70 × 2400 mm, 10 pieces per Box


CANYON
D80841 CU


PRAIRIE
D80851 CU


SAVANNA
D80861 CU


SNOW
D4494 CM


MOON
D4498 CM


ROCK
D4496 CM


BRIGHT
D6102 CV


FINE
D6101 CV


DUNE
D7094 CM


NATURAL
D6106 CV


SUNNY
D6105 CV


SMOKY
D6104 CV


BEACH
D4492 CM


SUNSHINE
D4495 CM


SUNSET
D4493 CM


RAW
D6103 CV


D2834


D701


D2747



D742



D467



D1497


K101

WATERPROOF SKIRTING BOARD (RAL 9016)

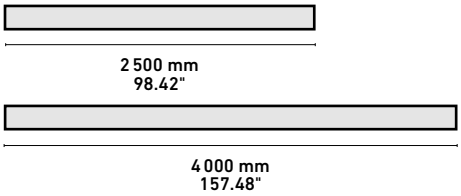

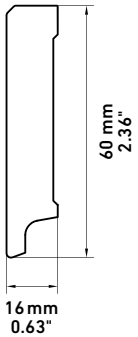

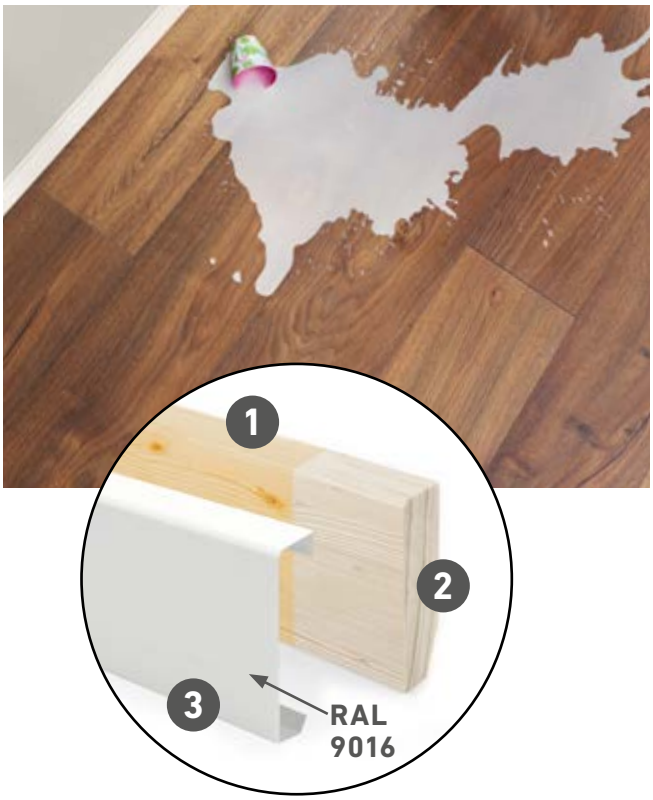

1

PUR waterproof glue

2

100% wooden spruce support, no swelling as occurs with MDF or other composites

3

Waterproof PP plastic film RAL 9016 with covering also over the bottom edge and partly on the underside to protect against water penetration

10 pieces per Box

SKIRTING BOARD WHITE IN MOISTURE RESISTANT HDF GREY

Keep it white or paint it.

PARALLEL



VICTORIAN



DIMENSIONS

14 / 80 × 2780 mm
14 / 95 × 2780 mm
14 / 115 × 2780 mm


10 pieces per Box

For optimal care

Our KRONOSWISS Cleaner

GENTLE AND THOROUGH, COMPLETELY NATURAL

With our mop water additive, you offer your floor the best possible care protection on a natural basis. The KRONOSWISS Cleaner is a water additive made only from vegetable soaps and natural care additives. Without chemical additives, it carefully cleans your floor without streaks or smears. In most cases, it is even sufficient to clean your floor with clear water. In any case, be sure to refrain from using aggressive agents to prevent damage to your floor.

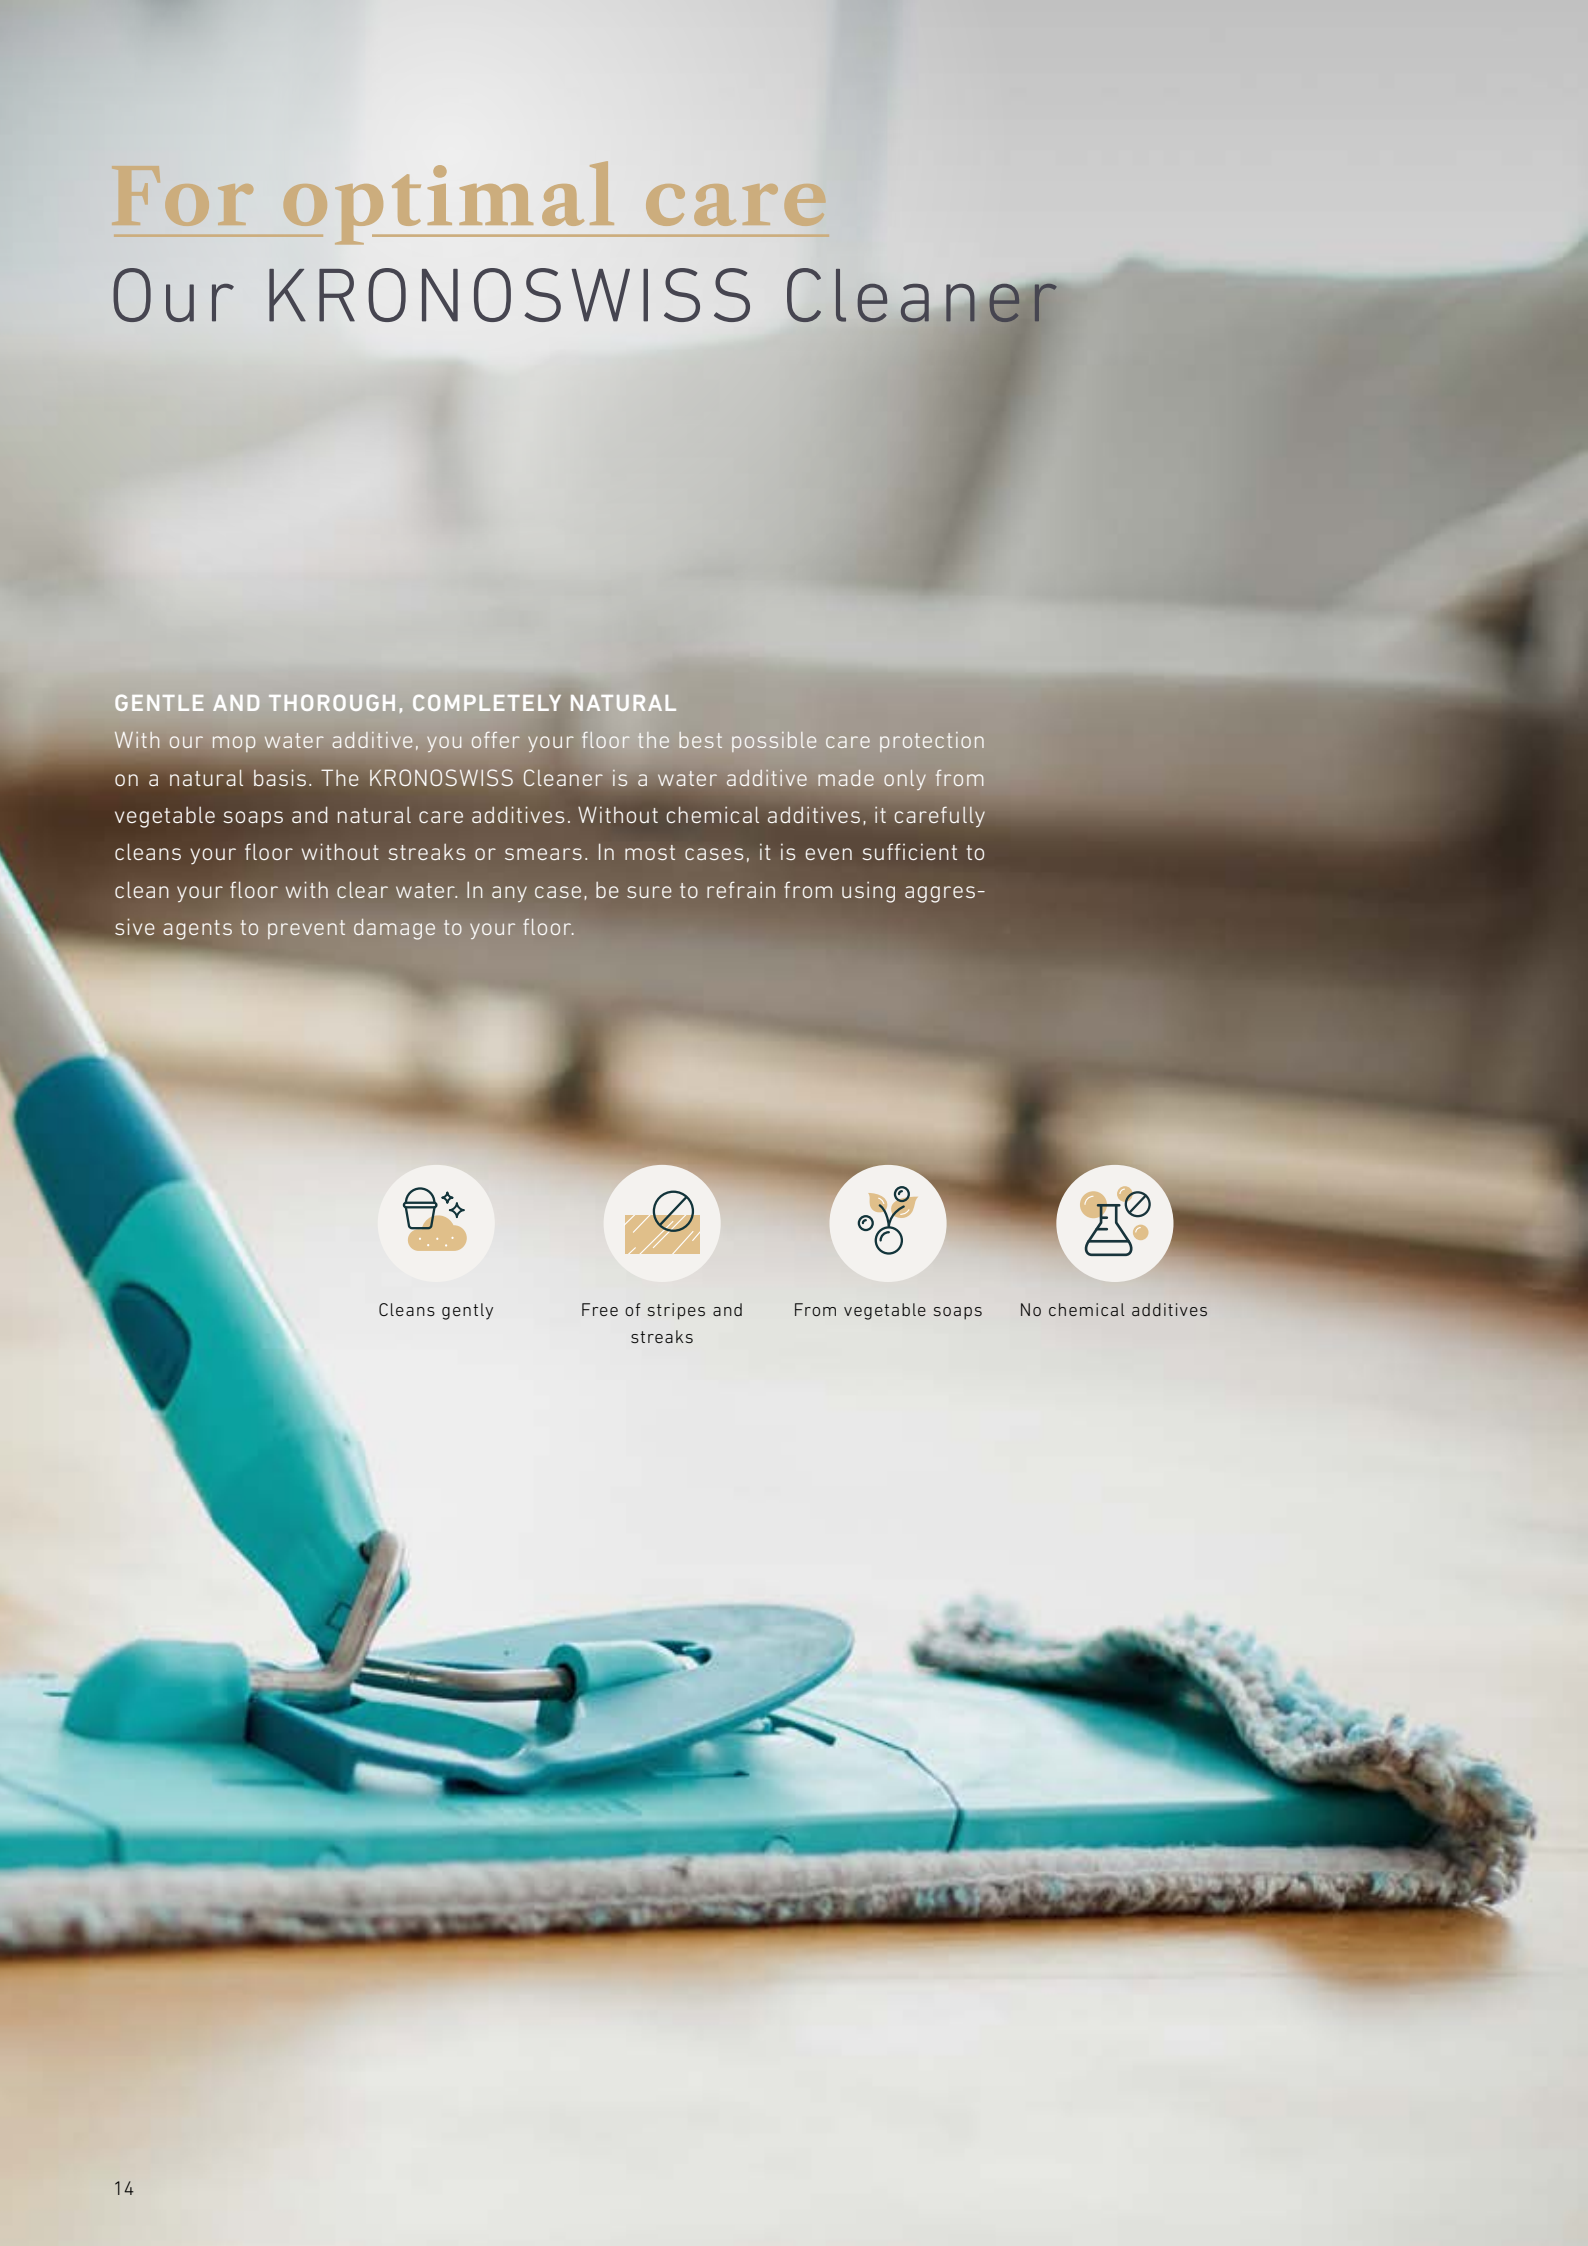

Cleans gently

Free of stripes and streaks

From vegetable soaps

No chemical additives



AND THIS IS HOW IT WORKS

Add three capfuls of KRONOSWISS Cleaner to 5 litres of wiping water, wring out the wipe well and wipe as usual. Finally, let the floor dry or wipe dry to make the floor walkable again as soon as possible without leaving footprints.

AND THIS IS HOW LONG IT LASTS

Long, even very, very long. And if you store KRONOSWISS Cleaner in a well-sealed container, it will even keep indefinitely. As practical: Since its liquid is not susceptible to frost, it does not necessarily have to be stored indoors.

TIPPS

Clean spillages and excesses asap – to avoid prolonged exposure and enable easier removal.

Sweep regularly – to remove dirt and other particles that can damage the surface of your floor.

PACKAGING

Piece: 1 lt/34 oz
Weight: 1.081 kg/2.38 lb

Box: 6 Pieces
Weight: 6.486 kg/14.29 lb

Pallet: 540 Pieces
Weight: 603.74 kg/1331 lb

2026 V1.0

SWISS KRONO AG
Willisauerstrasse 37 6122 Menznau (Schweiz)

swisskrono.com/ch